



MICROWAVE OVEN

INSTRUCTION MANUAL

AS823EBV-S00E

SAVE THESE INSTRUCTIONS CAREFULLY !



Customer centre	Carrier Midea India Private Limited 1st Floor, Pearl Tower, Plot No. 51, Sector 32, Gurgaon, Haryana 122001, INDIA
Contact No.	180030111111, 31211111
E-mail	customersupport.india@carrier.utc.com
Website	www.carriermideaindia.com

Read these instructions carefully before using your microwave oven, and keep it carefully. If you follow the instructions, your oven will provide you with many years of good service.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	AS823EBV-S00E
Rated Voltage:	230V~50Hz
Rated Input Power(Microwave):	1300W
Rated Output Power(Microwave):	800W
Rated Input Power(Grill):	1200W
Rated Input Power(Convection):	1200W
Oven Capacity:	23L
Turntable Diameter:	∅ 270mm
External Dimensions:	485×410×292mm
Net Weight:	Approx. 14 kg

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Warning : Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. Warning : It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.
20. Do not let cord hang over edge of table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
24. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.
26. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
27. Accessible parts may become hot during use. Young children should be kept away.
28. Steam cleaner is not to be used.
29. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
30. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
31. **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
32. The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)
33. The rear surface of appliance shall be placed against a wall.
34. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To Reduce the Risk of Injury to Persons Grounding Installation

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2)The extension cord must be a grounding-type 3-wire cord.
 - 3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch:
Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes.
Wipe the oven clean using a soft, dry cloth.

UTENSILS

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


SETTING UP YOUR OVEN

Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:


Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

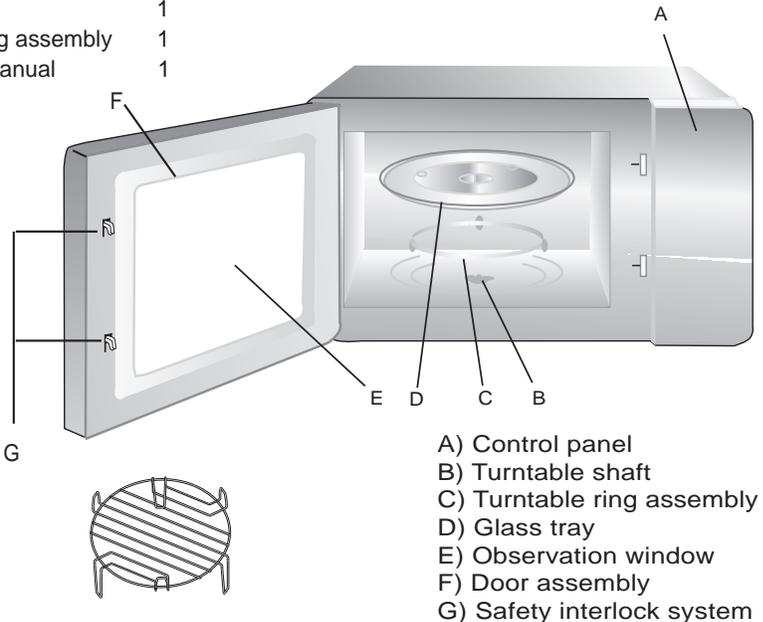

- A) Control panel
- B) Turntable shaft
- C) Turntable ring assembly
- D) Glass tray
- E) Observation window
- F) Door assembly
- G) Safety interlock system

Grill Rack(Only be used in grill function and be placed on the glass tray)

Turntable Installation

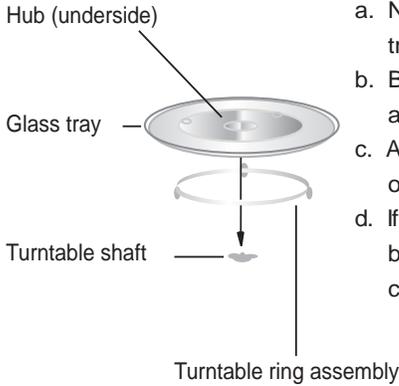

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

Installation

- Select a level surface that provide enough open space for the intake and/or outlet vents.

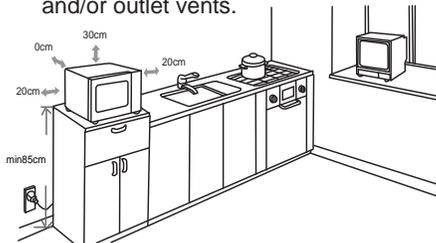

- The minimum installation height is 85cm.
- The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.
- Do not remove the legs from the bottom of the oven.

- Blocking the intake and/or outlet openings can damage the oven.
 - Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
- Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.



OPERATION INSTRUCTION

This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking.

1. Clock Setting

When the microwave oven is electrified, the oven will display "0:00", buzzer will ring once.

- 1) Press " **CLOCK/KITCHEN TIMER** ", "00:00" displays.

- 2) Press " **∇** " or " **∧** " to adjust the hour figures, the input time should be within 0--23.

- 3) Press " **CLOCK/KITCHEN TIMER** ", the minute figures will flash.

- 4) Press " **∇** " or " **∧** " to adjust the minute figures, the input time should be within 0-59.

- 5) Press " **CLOCK/KITCHEN TIMER** " to finish clock setting. ":" will flash.

2. Microwave Cooking

- 1) Press the "**MICROWAVE**" key once, and "P100" display.

- 2) Press "**MICROWAVE**" for times or press " **∇** " or " **∧** " to select the microwave power from 100% to 10%. "P100", "P80", "P50", "P30", "P10" will display in order.

- 3) Press "**START/+30SEC./CONFIRM**" to confirm.

- 4) Press " **∇** " or " **∧** " to adjust the cooking time. (The max time setting is 95:00.)

- 5) Press " **START/+30SEC./CONFIRM** " to start cooking.

NOTE: the step quantities for the adjustment time of pressing " **∇** " or " **∧** " are as follow:

- 0--1 min : 5 seconds
- 1--5 min : 10 seconds
- 5--10 min : 30 seconds
- 10--30 min : 1 minute
- 30--95 min : 5 minutes

Microwave Power Chart

Press	Once	Twice	Thrice	4 times	5 times
Microwave Power	100%	80%	50%	30%	10%

3. Grill Cooking

- 1) Press the "**GRILL/COMBI.**" key once, and "G-1" display.

- 2) Press "**GRILL/COMBI.**" for times or press " ∇ " or " \wedge " to select the grill power.
Stop pressing when "G-1" displays.

- 3) Press "**START/+30SEC./CONFIRM**" to confirm.

- 4) Press " ∇ " or " \wedge " to adjust the cooking time. (The maxtime is 95:00.)

- 5) Press "**START/+30SEC./CONFIRM**" to start cooking.

Note: If half the grill time passes, the oven sounds twice to tell you to turn the food over. You can just leave continue working. But in order to have a better effect of grilling food, you should turn the food over, close the door, and then press "**START/+30SEC./CONFIRM**" to continue cooking. If no operation, the oven will work automatically.

4. Combination Cooking

- 1) Press the "**GRILL/COMBI.**" key once, and "G-1" display.

- 2) Press "**GRILL/COMBI.**" for times or press " ∇ " or " \wedge " to select the grill power.
Stop pressing when "C-1", "C-2", "C-3" or "C-4" displays.

- 3) Press "**START/+30SEC./CONFIRM**" to confirm.

- 4) Turn " " to adjust the cooking time. (The max time setting is 95:00.)

- 5) Press "**START/+30SEC./CONFIRM**" to start cooking.

5. Convection Cooking(With preheating funtion)

The convection cooking can let you to cook the food as a traditional oven. Microwave is not used. It is recommended that you should preheat the oven to the appropriate temperature before placing the food in the oven.

- 1) Press the "**CONVECTION**" key once, "110" flash.

- 2) Keep pressing "**CONVECTION**" or press " ∇ " or " \wedge " to select the convection function. Note:the temperature can be chosen from 110 degrees to 200 degrees.

- 3) Press the "**START/+30SEC./CONFIRM**" to confirm the temperature.

- 4) Press the "**START/+30SEC./CONFIRM**" to start preheating. When the preheating temperature arrives, the buzzer will sound twice to remind you to put the food into the oven. And the preheated temperature is displayed and flash.

5) Put the food into the oven and close the door. Press "√" or "∧" to adjust the cooking time. (The maximum setting time is 95 minutes.)

6) Press the " **START/+30SEC./CONFIRM** " key to start cooking.

Note: a. Cooking time cannot be input until the preheating temperature arrives.

If the temperature arrives, door must be opened to input the cooking time.

b. If the time not input in 5 minutes, the oven will stop preheating. The buzzer sound five times and turn back to waiting states.

6. Convection Cooking(Without pre-heating function)

1) Press the "**CONVECTION** " key once, "110" flash.

2) Keep pressing "**CONVECTION**" or press " √ " or " ∧ " to select the convection function. Note:the temperature can be chosen from 110 degrees to 200 degrees.

3) Press the " **START/+30SEC./CONFIRM** " to confirm the temperature

4) Press " √ " or " ∧ " to adjust the cooking time. (The maximum setting time is 95 minutes.)

5) Press the " **START/+30SEC./CONFIRM** " key to start cooking.

7. Kitchen Timer

(1) Press " **CLOCK/KITCHEN TIMER** " twice, LED will display 00:00.

(2) Press " √ " or " ∧ " to enter the correct timer.(the maximum cooking time is 95 minutes)

(3) Press "**START/+30SEC./CONFIRM** " to confirm setting.

(4) When the kitchen time is reached, clock indicator will go out. The buzzer will ring 5 times.

If the clock be set(24-hour system), LED will display the current time.

Note:

a. The kitchen Time is differ from 24-hour system,Kitchen Timer is a timer.

b. When the door is open, Kitchen timer function will continue working.

c. During timer function process, any other program cannot be set.

8. Defrost By weight

- 1) Press "**W.T./Time Defrost**" to choose the defrosting by weight function. "dEF1" will be displayed.

- 2) Press "**√**" or "**∧**" to input the weight. "100", "200", "300", "400", "500", "600", "800", "1000", "1200", "1400", "1600", "1800" and "2000" will be displayed in order.

- 3) Press "**Start/+30Sec./Confirm**" to start defrosting. If "**Stop/Clear**" is pressed, it will go back to waiting state. At this time, press "**Start/+30Sec./Confirm**" again or the time for pause is more than 5 minutes, it will turn back to the waiting state. Press "**Start/+30Sec./Confirm**" in 5 minutes, the unit goes on working and time counts down. When it is finished, the buzzer sounds five times and turn back to the waiting states.

- 4) When half the defrost time pass, the buzzer will sound twice remind you to turn the food over, if no action is taken, the unit will continue working and the defrost result is not well.

9. Defrost By time

- 1) Press "**W.T./Time Defrost**" twice to choose the function of defrost by time. "dEF2" will be displayed.

- 2) Press "**√**" or "**∧**" to input the cooking time. The MAX.time is 95 minutes.

- 3) Press "**Start/+30Sec./Confirm**" to start defrosting. If "**Stop/Clear**" is pressed, it will go back to waiting state. At this time, press "**Start/+30Sec./Confirm**" again or the time for pause is more than 5 minutes, it will turn back to the waiting state. Press "**Start/+30Sec./Confirm**" within 5 minutes, the unit goes on working and time counts down.

10. Auto Menu

- 1) In waiting state, press "**√**" or "**∧**" to choose the function wanted, and "A01", "A02", "A03"... "A90" will be displayed.
- 2) Press "**START/ +30 SEC./CONFIRM**" to confirm the menu you need.
- 3) press "**√**" or "**∧**" to choose the weight of menu.
- 4) Press "**START/ +30 SEC./CONFIRM**" to start cooking.

11. Speedy Cooking

1) In waiting state, press "**START/+30SEC./CONFIRM**" key to cook with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds. The maximum cooking time is 95 minutes.

2) During microwave,grill,convection and combination states, press "**START/+30SEC./CONFIRM**" key to cook with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds.

Note: this function cannot work under defrost, auto menu and multi-stage cooking.

12. Lock-out Function for Children

Lock: In waiting state, press "**STOP**" for 3 seconds, there will be a long "beep" denoting entering into the children-lock state and "  " indicator will light. LED will display current time or 0:00.

Lock quitting: In locked state, press "**STOP**" for 3 seconds, there will be a long "beep" denoting that the lock is released, and "  " indicator will disappear.

13. Special Specifications

- 1) The maximum cooking time of "Microwave", "Grill", "Defrost by time" , "Convection" and "Combine" is 95 minutes.
- 2) When the door is open, the lamp will light. If it keeps opening in 10 minutes, the lamp will be off and the display will change to waiting states .
- 3) When open the door in waiting states or during setting process, the inicial display will stay the same.It can change and set too. But the "**START/+30SEC./CONFIRM**" key will not work.
- 4) Close the door, the lamp will be off. The setting can be changed. And the "**START/+30SEC./CONFIRM**" key can work too.

Auto menu Chart

	dispaly	menu	Weight/ display
Menu_1	A01	Avial	250g
	A02	Bhindi Masala	250g
			500g
	A03	Ghobi Masala/Baigan Masala/	250g
	A04	Baigan Masala	250g
	A05	Aalo Masala	250g
	A06	GujratiKadhi	4
	A07	Hyderabadi Chicken Masala	800g
	A08	KhoyaMatar	250g
	A09	Meat	800g
	A10	Mutton Korma	500g
	A11	Mutton Rogan Josh	1
	A12	Navratna korma	250g
	A13	Mix Veg Korma	4

	A14	PaneerMakhani	250g
	A15	PaneerPasanda	8
	A16	Paneer Masala	250g
	A17	Pumpkin Sambar	4
	A18	Veg Sambar	250g
	A19	Shukto	250g
	A20	Stuffed Capsicum	250g
			500g
	A21	Veg Kolhapuri	250g
			500g
	A22	Veg Makhanwala	250g
			500g
	A23	Vegetable	200 g
			300 g
			400 g
			500 g
	A24	Vegetables with coconut curry	250g
			500g

Menu_2	A25	Fruit Punch	200 g
	A26	Grilled Chicken Pieces	300g
			600g
	A27	Grilled Salmon/Grilled Chicken Wings/Grilled Chicken Drumsticks	250g
	A28	Grilled Chicken Wings	250g
	A29	Grilled Chicken Drumsticks	250g
	A30	Payasam	4
	A31	Tomato Rasam	4
	A32	Jacket Potato	250g
	A33	Grilled Sandwich	2
	A34	Cheese Sandwich	1

Menu_3	A35	Chicken Club Sandwich	250g
	A36	Stuffed Sandwich	250g
	A37	Veg Sandwich	250g
	A38	Nachos	250g
	A39	Pasta	250g
	A40	Macroni	250g
	A41	Cheese Pizza	300 g
	A42	Veggie Pizza	1
Menu_4	A43	GajarHalwa	250g
	A44	SevianKheer	250g
Menu_5	A45	Apple Jam/	1
	A46	Pineapple Pudding	1
	A47	Black Forest Cake	1
	A48	Cake	1
	A49	Chocolate Cookies	1

	A50	Custard Cookies	1
	A51	Fruit Cake	1
Menu_6	A52	Coconut Rice	150g
	A53	Jeera Rice	150g
	A54	Makai Ki Khichdi	250g
	A55	Masala Rice	150g
	A56	Rice Kheer	6
	A57	STEAMED RICE	200g
	A58	Boiled Rice	200g
Menu_7	A59	Tomato Rice	150g
	A60	Fish Curry	250g
			500g
	A61	Tandoori Fish	500g
	A62	Shrimps Curry	500g
A63	King Fish Vindaloo	1	

Menu_8	A64	Honey Chilli Potato	4
	A65	Fish	200 g
			300 g
			400 g
			500 g
	A66	Grilled PaneerTikka/	250g
	A67	Grilled Mushrooms	250g
	A68	Dhokla	12
	A69	Khandvi	4
	A70	Potato	230 g
			460 g
			690 g
	A71	Popcorn	50g
			100g
	A72	RawaDhokla	12
	A73	Roast Chicken	800g
1000g			
A74	Chicken Wings	8	
A75	Chicken Drumsticks	8	
A76	Stuffed Mushroom	4	

Menu_9	A77	Boiled Potato	200g
			300g
	A78	Boiled Vegetables	250g
	A79	Bread	1
	A80	Garlic Bread	1
	A81	Rice Idli	8
	A82	RavaIdli	8
	A83	Tea	1
			2
			3
	A84	Coffee	460 g
			690 g
	A85	Choco Milk	460 g
			690 g
A86	Lemon Tea	460 g	
		690 g	
A87	Oat Milk	460 g	
		690 g	
A88	Upma	150g	
A89	Uppti	8	
Menu_10	A90	reheat	150g
			250g
			350g
			450g
			600g

Trouble shooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.