



REMOTE CONTROLLER
OWNER'S MANUAL

CONTENTS

Compressor Frequency setting instruction.....	1
Remote Controller Specification.....	2
Performance Features.....	2
Features of the Remote controller Buttons.....	2
Indicators on Display panel.....	4
Operating the Remote Controller.....	5
Warning.....	8

COMPRESSOR FREQUENCY SETTING INSTRUCTION

For Inverter Models

Capacity Rating	Step 1	Step 2	Step 3	Step 4
	Select set Temperature	Select Mode	Press Turbo button	Test mode Activate by
100%	17	Cool, High Fan Speed & Compressor Running	Press Turbo button more than or equal to 6 times frequently within 10 seconds (Beep sound will be heard every time while pressing turbo button).	Final beep acknowledgment will be listened (Fan Speed will automatically change to turbo).
50%	19	Cool, High Fan Speed & Compressor Running	Press Turbo button more than or equal to 6 times frequently within 10 seconds (Beep sound will be heard every time while pressing turbo button).	Final beep acknowledgment will be listened (Fan Speed will automatically change to turbo).

Remote Controller Specification

Model	R51M/(C)E, R51M/BG(C)E, RG51M2/(C)E, RG51A/(C)E, RG51M3/(C)E, RG51M3/BG(C)E, RG51M8/(C)E, RG51M9/(C)E, RG51M/BGE-IN, RG51Y2/BGE, RG51Y5/E
Rated Voltage	3.0V(Dry batteries Lr032)
Transmission Distance	8m
Environment	-5°C~60°C

NOTE: For Model of RG51Y5/E and RG51Y6/E, if the unit is turned off under COOL, AUTO or DRY mode with the set temperature less than 24 °C, the set temperature will be automatically set to 24 °C when you turn on the unit again. if the unit is turned off under HEAT mode with the set temperature more than 24 °C, the set temperature will be automatically set to 24 °C when you turn on the unit again.

Performance Features

1. Operating Mode: AUTO COOL DRY HEAT and FAN .
2. Timer Setting Function in 24 hours.
3. Indoor Setting Temperature Range : 17°C~30°C
4. Full function of LCD (Liquid Crystal Display)

Features of the Remote controller buttons

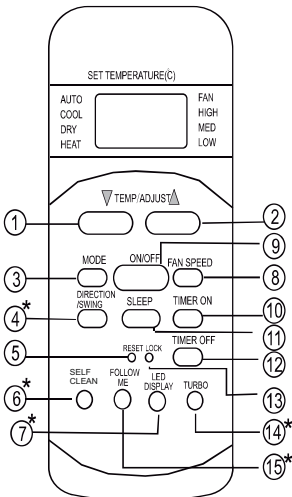 


Fig. 1

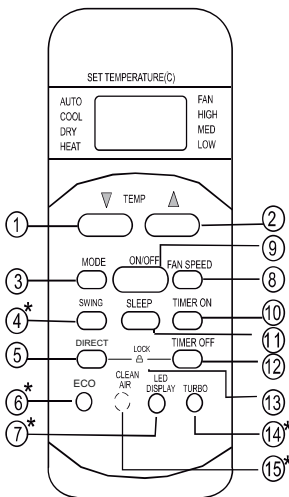 


Fig. 2

NOTE:

* : Indicates optional button.

14* and 15* buttons are not available for Models RG51M2/(C)E.

 
7*, 14* and 15* buttons are not available for Models RG51M3/(C)E and RG51M3/BG(C)E.

15* button is not available for Models of R51M/(C)E, R51M/BGE, R51M/BGE-IN.

4*, 6*, 7*, 14*, 15* buttons are not available for Models RG51M9/(C)E.

6*, 7*, 14*, 15* buttons are not available for Models RG51M8/(C)E.

- ① TEMP Button ▼: Push this button to decrease the indoor temperature setting.
- ② TEMP Button ▲: Push this button to increase the indoor temperature setting .
- ③ MODE Selection Button: Each time the button is pressed, the operation mode is shifted in the direction of the arrow



NOTE : Please do not select HEAT mode if the machine you purchased is cooling only type. Heat mode is not supported by the cooling only appliance.

- ④ SWING Button: Push this switch button to activate auto swing feature of the horizontal louver. Push it again to stop.
- ④ DIRECTION/SWING (optional) : Press this button once and quickly to change the air flow direction of the horizontal louver a little.

The moving angle of the louver is 60° for each press. Press the button without releasing for 2 more seconds, the horizontal louver would swing automatically. Press it again, it would stop moving. When the louver swing/moving at a certain position which would affect the cooling and heating effect of the air conditioner, it would automatically change the swing direction (upward or downward).

- ⑤ Direct Button: Use to set airflow direction
- ⑥ ECO Button: Air conditioner will automatically operate 24°C with auto fan speed.
- ⑥ SELF CLEAN (optional): Press this button under COOL or DRY mode, the self clean function is activated. Press it again will stop the operation and turn of the unit.
- ⑦ LED DISPLAY Button: Press this button to clear the digit display in the air conditioner, press it again to activate it (Not available for the units without LED display window).
- ⑧ FAN SPEED Button: Used to select the Fan Speed in four steps- AUTO LOW MED or HIGH. Each time the button is pressed, the fan speed mode is shifted.
- ⑨ ON/OFF Button: Push this button to start operation, push the button again to stop operation.

- ⑩ **TIMER ON Button:** Press this button to initiate the auto-on time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-on time to 0.0.
- ⑪ **SLEEP Button:** Press this button to go into the Energy-Saving operation mode. Press it again to cancel. This function is only can be used on COOL, HEAT and AUTO mode and maintain the most comfortable temperature for you.
- ⑫ **TIMER OFF Button:** Press this button to initiate the auto-off time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-off time to 0.0.
- ⑬ **TURBO Button:** Active/Disable Turbo function. Turbo function enables the unit to reach the preset temperature at cooling or heating operation in the shortest time(if the indoor unit does not support this function, there is no corresponding operation happened when pressing this button.)
- ⑭ **CLEAN AIR Button (OPTIONAL):** When push this button, the Ionizer or Plasma Dust Collector(depending on models) is energized and will help to remove pollen and impurities from the air.
- ⑮ **Follow Me (OPTIONAL):** Press this button to activate Follow me. This function can adjust room temperature base on the controller's sensor and make your comfort

Note : Please put the controller in the location where can ensure the indoor unit can receive the signal

Indicators on Display Panel

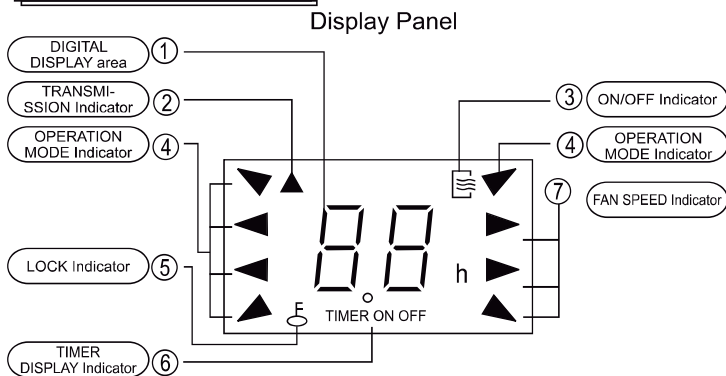 


Fig. 3

- ① **DIGITAL DISPLAY area:** This area will show the set temperature and, if in the **TIMER** mode, will show the **ON** and **OFF** settings of the **TIMER**. If in the **FAN** mode, nothing is appeared.
- ② **TRANSMISSION Indicator:** This indicator flashes one time when remote controller transmits signals to the indoor unit.
- ③ **ON/OFF Indicator:** This symbol appears when the unit is turned on by the remote controller, and disappear when the unit is turned off.
- ④ **OPERATION MODE Indicator:** When press the **MODE** button, it shows the current operating mode -- "**AUTO**", "**COOL**", "**DRY**", "**HEAT**" (Cooling only model without), or "**FAN**" mode.
- ⑤ **LOCK Indicator:** **LOCK** display is displayed by pushing the **LOCK** button. Push the **LOCK** button to clear display.
- ⑥ **TIMER DISPLAY Indicator:** This display area shows the settings of the **TIMER**. That is, if only the starting time of operation is set, it will display the **TIMER ON**. If only the turning off time of operation is set, it will display the **TIMER OFF**. If both operations are set, it will show **TIMER ON-OFF** which indicates you have chosen to set both the starting time and off time.
- ⑦ **FAN SPEED Indicator:** Press the **FAN SPEED** button to select the desired fan speed setting (Auto-Low-Med-High). You selection will be displayed in the LCD window except the Auto fan speed.

▲ **NOTE:** All signs shown in the Fig.2 is for the purpose of clear presentation. But during the actual operation only the relative functional signs are shown on the display panel.

Operating the Remote Controller

Install/ Replace Batteries

The Remote Controller uses two dry batteries(LR03X2).

1. To install the batteries, slide the back cover of the battery compartment and install the batteries according the direction (+ and -)shown on the Remote Controller.
2. To replace the old batteries, use the same method as mentioned above.

▲ **NOTE**

1. When replacing batteries, do not use old batteries or a different type battery. This may cause the remote control to malfunction.
2. If you do not use the remote controller for several weeks remove the batteries. Otherwise battery leakage may damage the remote controller.

3. The average battery life under normal use is about 6 months.
4. Replace the batteries when there is no answering beep from the indoor unit or if the Transmission Indicator light fails to light.
5. Do not dispose batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

AUTOMATIC OPERATION

1. Use the MODE button to select AUTO.
2. Push the TEMP button to set the desired room temperature . The most comfortable temperature settings are between 21°C to 28°C.
3. Push the ON/OFF button to start the air conditioner. The OPE- RATION lamp on the display panel of the indoor unit lights. The FAN SPEED is automatically set and there are no fan speed indicators shown on the display panel of the remote controller.
4. Push the ON/OFF button again to stop the unit operation.

NOTE

1. In the AUTO mode, the air conditioner can logically choose the mode of COOL, FAN and HEAT by sensing the difference between the actual ambient room temperature and the set temperature on the remote controller.
2. If the AUTO mode is not comfortable for you, the desired mode can be selected manually.

COOL/ HEAT (Cooling only model without) and FAN Operation

1. If the AUTO mode is not comfortable, you may manually over-ride the settings by using COOL, HEAT or FAN modes.
2. Push the TEMP button to set the desired room temperature. When in COOLING mode, the most comfortable settings are 21°C or above. When in HEATING mode, the most comfortable settings are 28°C or below.
3. Push the FAN SPEED to select the FAN mode of AUTO, HIGH, MED or LOW.
4. Push the ON/OFF button, the operation lamp lights and the air conditioner start to operate as your settings. Push the ON/OFF button again to stop this unit operation.

NOTE

The FAN mode can not be used to control the temperature. While in this mode, only steps 1, 3 and 4 may be performed.

DRY Operation

1. Push the MODE button to select DRY.
2. Push the TEMP button to set the desired temperature from 17°C to 30°C.
3. Push the ON/OFF button, the OPERATION lamp lights and the air conditioner starts to operate in DRY mode at LOW fan speed. Push the ON/OFF button again to stop this unit operation.

NOTE

Due to the difference of the set temperature of the unit and the actual indoor temperature, the Air Conditioner when in DRY mode will automatically operate many times without running the COOL and FAN mode.

TIMER Operation

Push TIMER ON button to set the auto- on time and TIMER OFF button to set the auto-offtime.

1. To set the starting time.
 - 1.1 Push the TIMER ON button, then the remote controller shows TIMER ON , the last set time for the starting operation and the signal "h" will be shown on the DIGITAL DISPLAY area. You are now ready to reset the time to START the operation.
 - 1.2 Push the TIMER ON button again to set desired unit start time.
 - 1.3 After setting the TIMER ON ,there will be a one-half second delay before the remote controller transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal "h" disappears and the set temperature will re-appear on the digital display.
2. To set the stopping time.
 - 2.1 Push the TIMER OFF button and the remote controller will show TIMER OFF, the last set time for the stopping operation and the signal "h" will be shown on the DIGITAL DISPLAY area. You are now ready to reset the time of the STOP operation.
 - 2.2 Push the TIMER OFF button again to set the time you want to stop the operation.
 - 2.3 After setting the TIMER OFF ,there will be a one-half second delay before the remote controller transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal "h" disappears and the set temperature will re-appear on the digital display.

3. Set the starting & stopping time

3.1 Push the TIMER ON button, the remote controller will show TIMER ON, the last set time for START operation and the signal "h" will be shown on the DIGITAL display area. You

are now ready to readjust the TIMER ON to start the operation.

3.2 Push the TIMER ON button again to set the time you want to start the operation.

3.3 Push the TIMER OFF button, the remote controller will show TIMER OFF, the last set time for STOP operation and the signal "h" will be shown on the DIGITAL display area. You are now ready to reset the time to STOP operation.

3.4 Push the TIMER OFF button again to set the time you want to stop the operation.

3.5 After setting the TIMER, there will be a one-half second delay before the remote controller transmits the signal to the Air Conditioner. Then, after approximately another 2 seconds, the signal "h" disappears and the set temperature will re-appear on the digital display.

Change the TIMER

To change the TIMER ON/OFF time, just press the corresponding TIMER button and reset the time.

To cancel the TIMER ON/OFF setting, just adjust the TIMER time to 0:00.

NOTE

The setting time is relative time. That is the time set is based on the delay of the current time.

WARNING

1. Be sure there are no obstacles between the remote controller and the receiver of indoor unit otherwise the air conditioner will not work.
2. Keep the Remote Controller away from any liquids.
3. Protect the remote controller from the high temperatures and exposure to radiation.
4. Keep the indoor receiver out of direct sunlight or the Air Conditioner may malfunction.
5. Keep Remote Controller away from EMI(Electro-Magnetic Interference) supplied by other household appliances.



16122000A54195